


ALLEGRI

BY KALCO LIGHTING

Assembly & Installation Instructions for:
11630-010-FR001 3-Light Sconce

Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

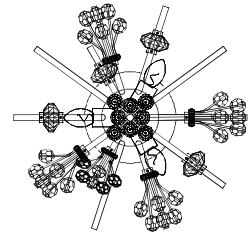

WARNING - TO REDUCE THE RISK OF FIRE OR INJURY:


- 1.If you are unfamiliar with electrical wiring, call a qualified electrician to install this unit .More than one person may be necessary to install fixture ,make sure you have enough qualified help.
- 2.Turn off the power to the fixture's circuit at the service panel. Use a voltage detector to verify that the power is off.
- 3.DO NOT install bulb which exceeds the maximum wattage specified on the socket label.

Fixture Assembly

Step 1. Place mount mounting and wiring steps before shade installation step

Step 2.Assemble shade to the bulb as shown.Gently slide the Fabric shade down the guide on the frame to avoid breaking it.

Step 3. Install candelabra bulbs,do not use bulbs that exceeds 40W

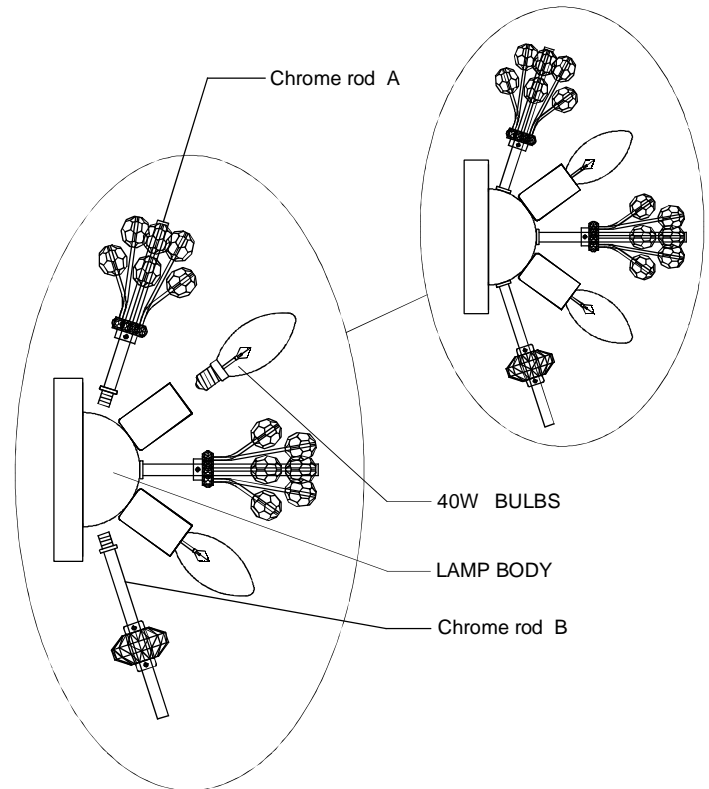


Customer Service :(702)361-4345,(800)525-2655,customer.service@kalco.com

Fixture Assembly


"A"-Plain Rod
LENGTH CHART

ITEM	LENGTH "X"	QTY
A	4.8"	4



"B"-Ball Rod
LENGTH CHART


ITEM	LENGTH "X"	QTY
B	4.8	4




KALCO# PA49BFB
LOCK RING WITH SET
SCREW

"F"-Cluster Rod
LENGTH CHART


ITEM	LENGTH "X"	QTY
C	4.8	6

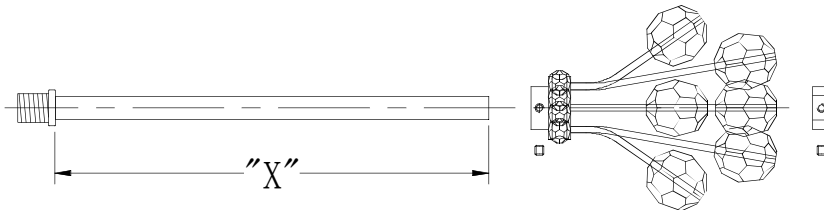



FLOWER CRYSTAL ROD "C"

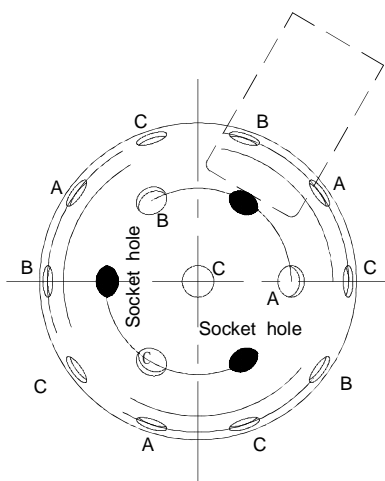

ROW 1

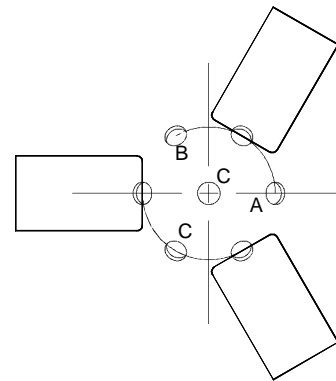

ROW 2

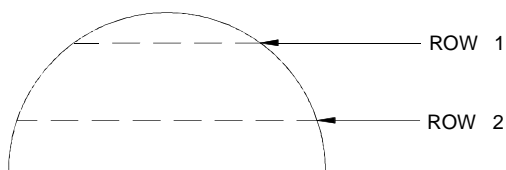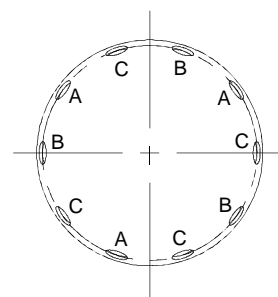

Customer Service : (702)361-4345, (800)525-2655, customer.service@kalco.com

Fixture Assembly

Step 4. Fasten 2 (state specification of screw) into mounting plate so that they extend away from wall when mounting plate is installed

Step 5. Attach the mounting plate to outlet box with screws

Step 6. Refer to wiring diagram.
Splice the ribbed side of fixture cord to the white supply wire from outlet box with wire connector. Splice the smooth side of the fixture cord to black supply wire from outlet box with wire connector

Step 7. Carefully tuck in all wires. Attach the backplate with the mounting screw on the crossbar. Secure fixture with shell knobs.

